

270 Rutledge Rd Unit E Fletcher, NC 28732 USA Phone: 1-828-654-7920 Email: sales@proscale.com

Web: www.proscale.com

# ProScale #700-1600-235(G) General Purpose Readout Version 3

# TECHNICAL DATA SHEET

#### **GENERAL INFORMATION**

- All-purpose readout suits most applications.
- Resolutions down to 0.01mm, or .001 inches, or 1/64<sup>th</sup> (fractions)
- Battery powered.
- Can be externally powered with "G" version.
- Easy installation onto nearly any machine or ProScale measuring system.
- Large, easy-to-read characters
- 6pin input, 10pin output ports
- Auto-power off after 15 minutes.
- 3-year warranty.
- Made in USA.



## **MECHANICAL:**

- Glass reinforced ABS plastic case
- Buttons are sealed from debris ingress
- Surface mounts with screws or Velcro
- Mounting options from inside the case or from behind the readout.
- Excellent vibration resistance.
- Operating temperature range: 30-120 F
- Open case with Phillips screwdriver.

### **ELECTRICAL:**

- Six conductor cable RJ11 input connector.
- 10 conductor IDC type output connector.
- Power and input/output connector supplied with "G" option.
- CR123 lithium battery powered (3 volts)
- External power option for 12-24VDC input
- Compatible with most ProScale encoders made since 1989 (with auto-configuration)\*
- Over 40 User-Programmable settings
- Output signal is Digimatic, same as most digital calipers used worldwide.
- Built-in battery self-test (hold DATUM key 7 seconds)


<sup>\*</sup>The G option (part number 700-1600-235G) should not be used with Models 150B or 250B.

#### **ABOUT ACCURACY:**

Accuracy is determined by the electronic scale that is connected to the readout.

This readout has user-programmable linear compensation built-in.

#### **DIMENSIONS:**

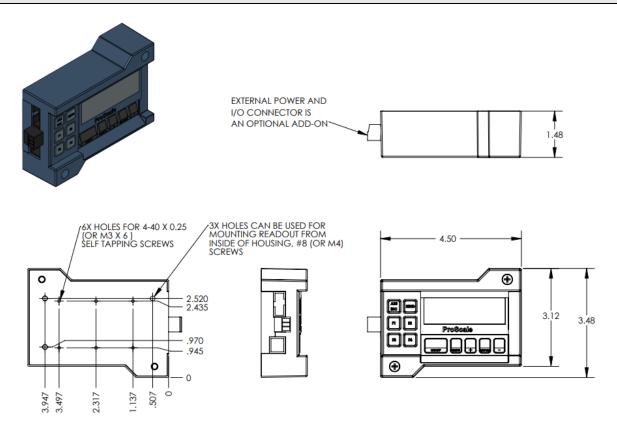

3D CAD (STEP and IGS) files are available at www.proscale.com or by email on request.

### **FEATURES:**

- 1. Battery or external power operation. (Internal jumper must be moved to switch power type.)
- 2. Auto-power off after 15 minutes (timer is user-programmable).
- 3. Auto-power on after .010 inches of motion (range is user-programmable).
- 4. Absolute and Incremental readings
- 5. Zero point (or Datum value) is user-programmable and can be set anywhere
- 6. 5 Units modes are standard, but some can be hidden with user-programming.
- 7. Compatible with ProRF, U-Wave, and GageWay wired and wireless transmitters.
- 8. Programmable offsets store and keep up to 5 'home' positions at the same time.
- 9. Special functions such as Go/NoGo, position monitor, range limits, and math functions are built-in.
- 10. All keys can be disable using programming menu.

#### WHERE TO ORDER:

- From factory by calling 1-828-654-7920
- From website: <u>www.proscale.com</u>
- From distributors see list at www.proscale.com/where-to-buy